BILTMORE / BILTMORE CLASSIC FIXED FOOT CONTROL INSTALLATION

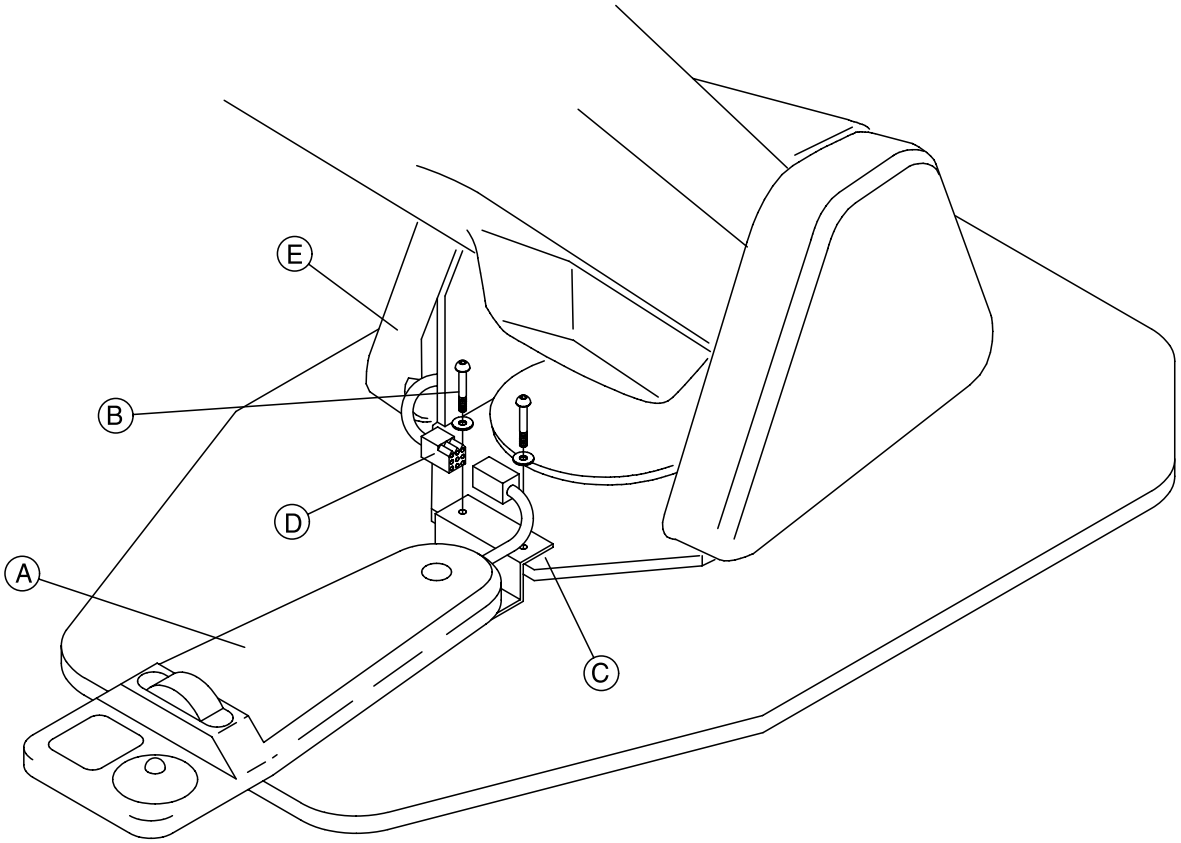

Ⓐ Remove Foot Control from packing material.

Ⓑ Remove (2) 1/4-20 socket head screws and (2) 1/4" Flat Washers from Chair Base

Ⓒ Install Fixed Foot Control on Chair Base as shown using 1/4" Screws and Washers

Ⓓ Plug Foot Control Connector into Connector protruding from left hand Base Cover.

Ⓔ Push connectors behind left hand Base Cover.

Ⓕ Check fuction of Foot Control as described in Section III part 2 of the Chair Installation Manual.

Knight® by Midmark

Midmark Corporation • 60 Vista Drive • P O Box 286
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

TPW1518 Rev.B (11/99)